




FRONT RUNNER
VEHICLE OUTFITTERS

LOCKABLE STRAP FOR WATER CAP / 45L

ENG

RRAC120

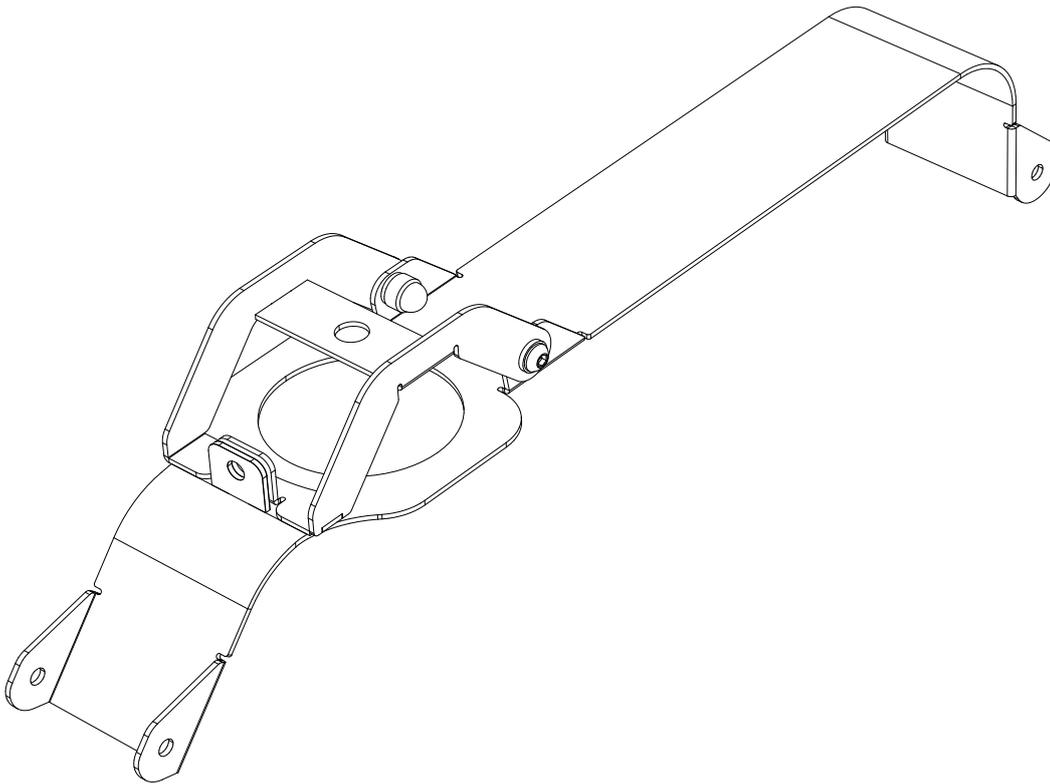

READ ME !

Thank you for purchasing a Front Runner Lockable Strap For Water Cap / 45L - by Front Runner.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1

GET ORGANIZED

IN THE BOX

1	1 X	Strap
2	1 X	Lockable Bracket
3	2 X	M6 x 16 Button Head Bolt
4	6 X	M6 x 12 x 1SS Flat Washer
5	2 X	M6 Nyloc Nut
6	2 X	M6 Nut Cap

TOOLS NEEDED




10MM




4mm

FIGURE 1.1

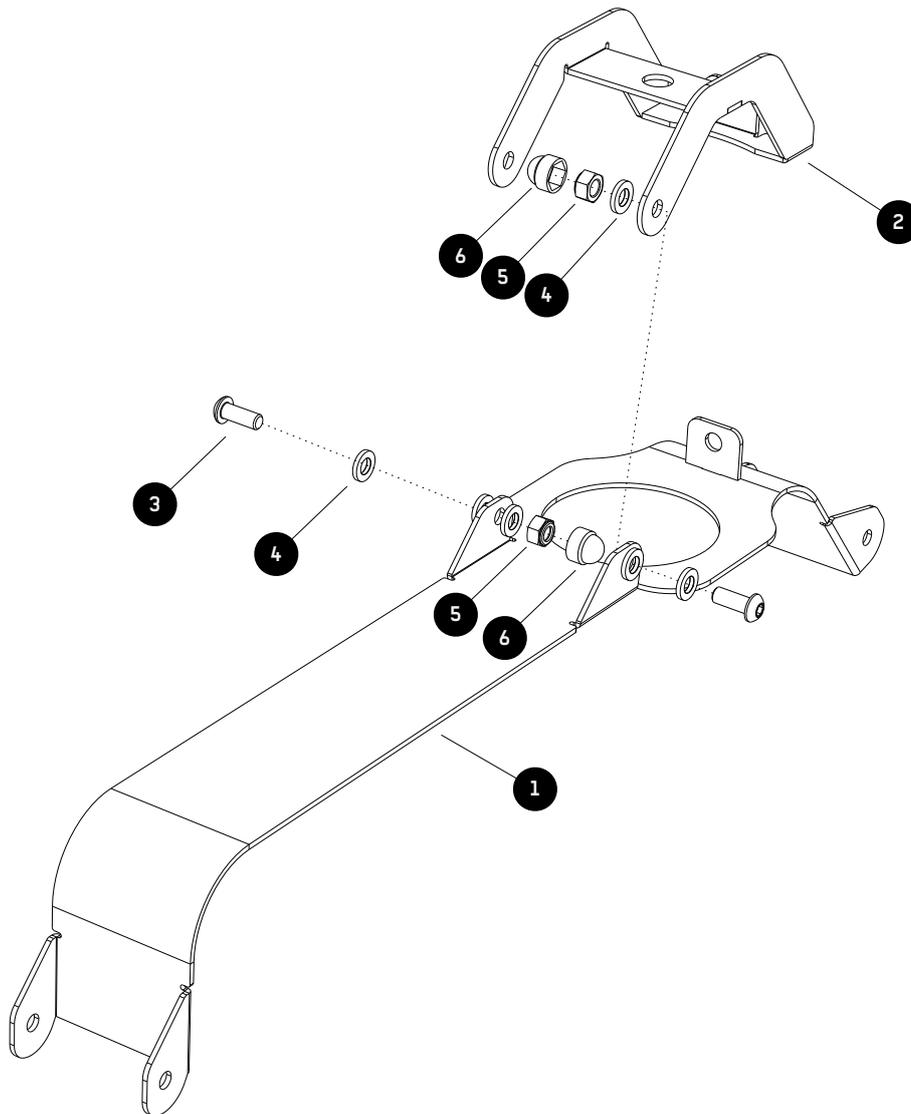

2**FIT AND SECURE**

2.1

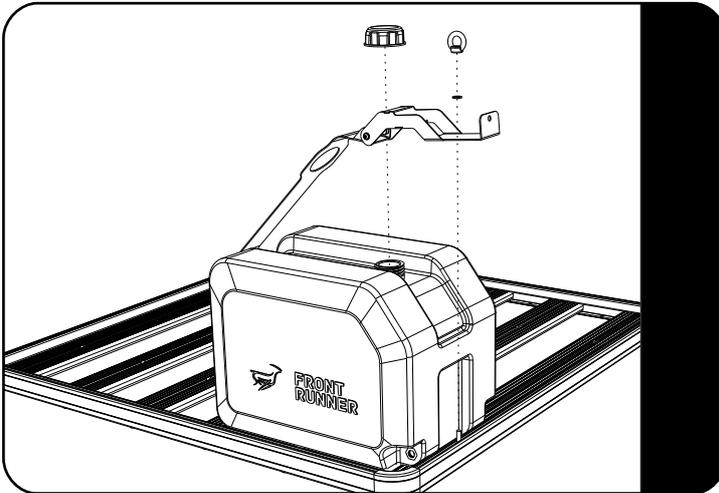


Loosen and remove the tank cap and the Eye-Nut that holds the tank in place and then remove the tank from the Rack.



You will need to squeeze the "Y-Spring" on the end of the Plastic Cap's retaining wire to release the Plastic Cap from the Tank

2.2

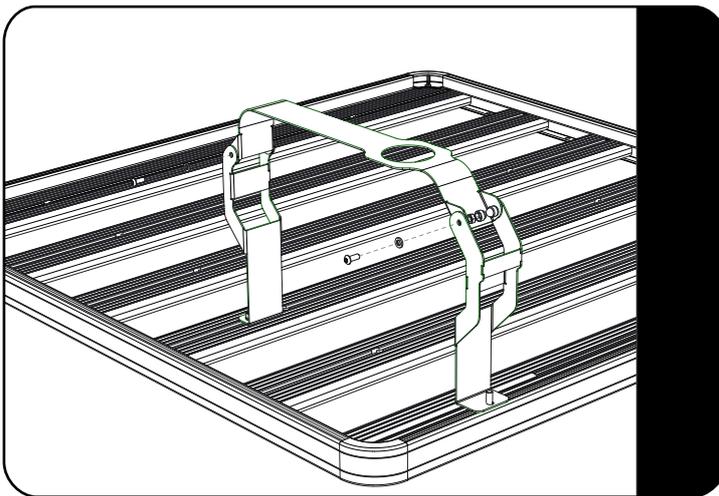


Remove the Nut Caps from all four bolts connecting the Strap to the uprights.

Loosen and remove the bolts. Keep the bolts as you will be using them in Step 2.3



Note the position of the Washer between the top part of the bracket and the uprights. In Step 2.5 you will have to position the Washers in the same place. Refer to Step 2.3

2.3

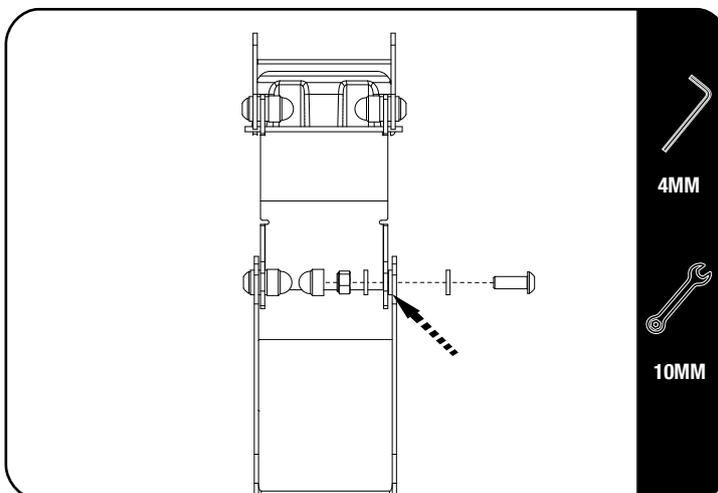


Note the position of the Washer between the upright and Lockable Strap For Water Cap.

4MM

10MM

2 FIT AND SECURE


2.4

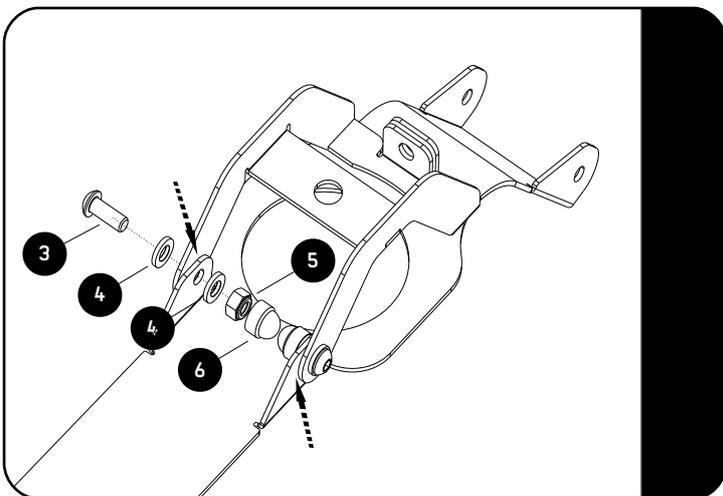

Assemble the Lockable Bracket (Item 2) to the Strap (Item 1) using M6 x 16 Button Head Bolts, M6 x 12 x 1SS Flat Washer and M6 Nyloc Nuts (Items 3, 4 & 5) as shown.


Place M6 x 12 x 1SS Flat Washers (Item 4) between the Strap and the Lockable Bracket shown with arrows.

2.5

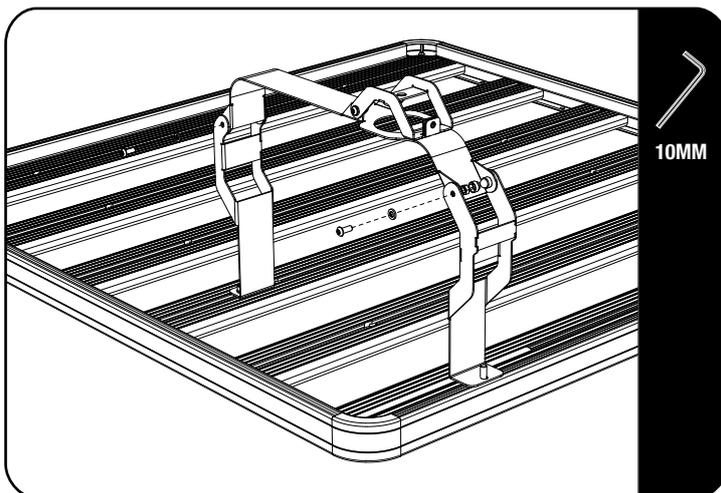

Assemble the Lockable Strap For The Water Cap to the upright brackets by placing it on the inside of the upright brackets. Use the fasteners that you removed in Step 2.2.

2.6

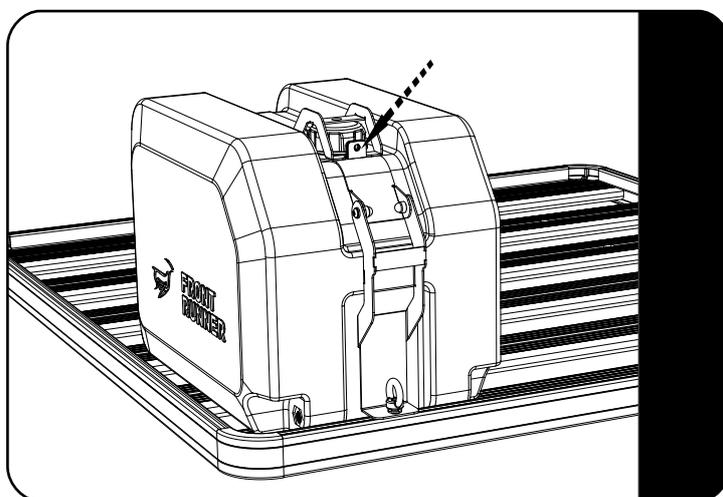

Place the Water Tank into position and close the Strap. Refit the Eye-Nut that secures the tank.


Open the lockable part of the Strap and refit the Cap. You will need to squeeze the "Y-Spring" on the end of the Plastic Cap's retaining wire and push the "Y-Spring" into the Tank filler neck.

Flip the lockable part of the Strap over the Cap and lock with a suitable Pad-Lock.

3

COMPLETION

3.1

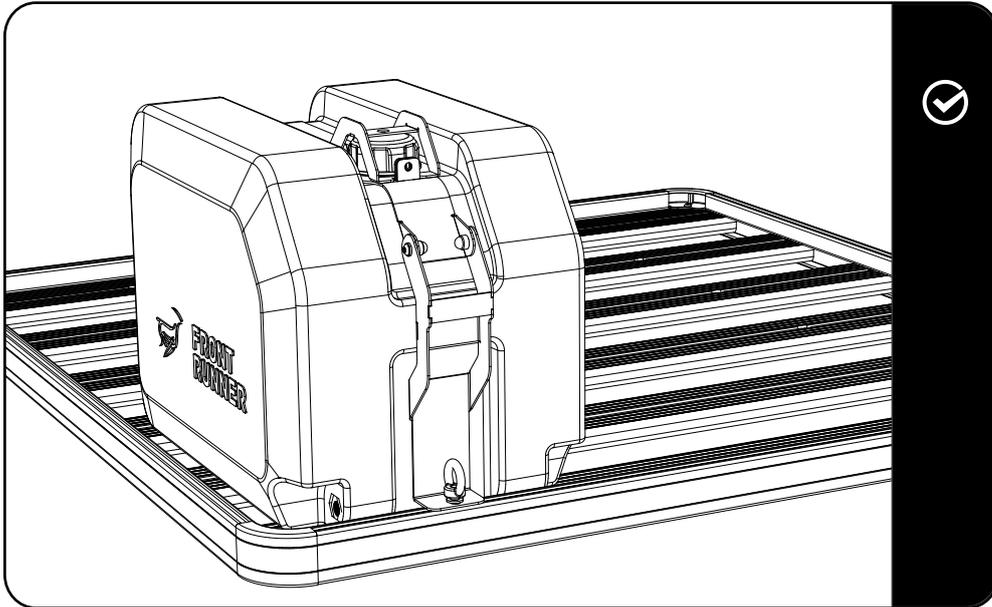

Congratulations! You did it. Take a step back and admire your work!

4

Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions. Please call us if you have any questions about the installation of this product.

5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or Online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    