

READ ME !

Thank you for purchasing Front Runner LED Light Mounting Brackets.
Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.
Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.
Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	2 X	Under Rack Mount Bracket 1LH + 1RH
2	2 X	Front Mount Bracket 1LH + 1RH
3	4 X	M8 x 25 Button Head Bolt
4	2 X	M8 x 16 Hex Bolt
5	4 X	M8 x 16 X 1.6SS Flat Washer
6	4 X	M8 Nyloc Nuts
7	4 X	M6 x 16 Button Head Bolt

TOOLS NEEDED




FIGURE 1.1

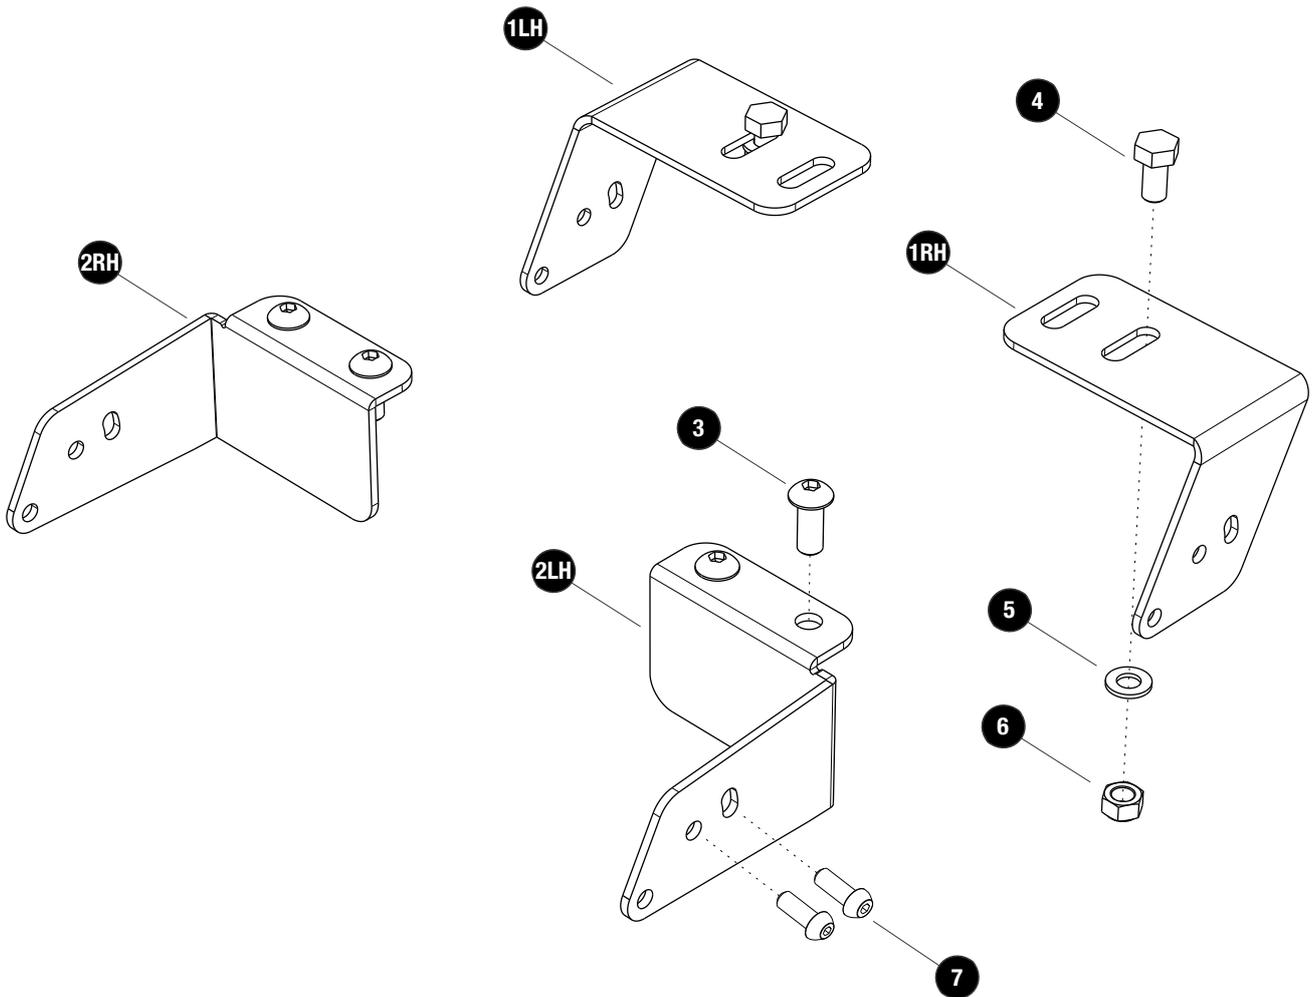

2**FIT AND SECURE - BELOW RACK FITMENT**

2.1

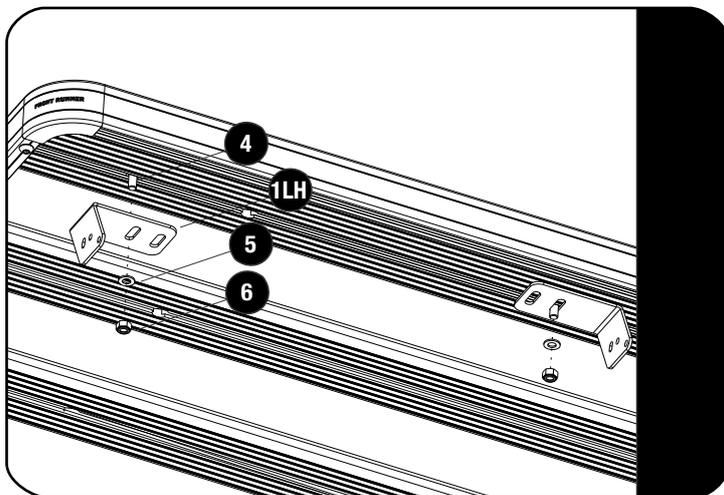

Choose where on the rack you would like to fit the LED light.




If you decided to fit the the light on the side of the rack on the Side Profile or in front on the Combined Slat, proceed to 3.1.

Slide two M8 x 16 Hex Bolts (Item 4) into the slats.

Loosely fit the Mounting Brackets (Item 1LH & 1RH) using M8 x 16 x 1.6SS Flat Washers and M8 Nyloc Nuts (Items 5 & 6) as shown.


2.2

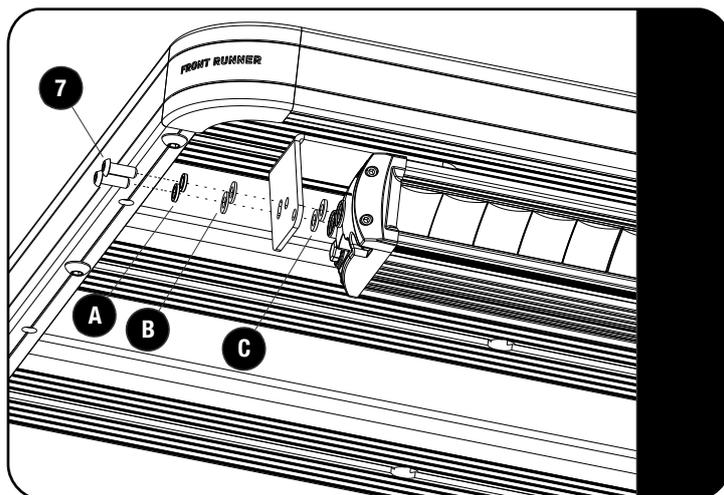

Fit the LED light to the brackets as shown, using the M6 x 16 Button Head Bolts (Item 7) and fasteners supplied with the light .

- A. M6 String Washer
- B. M6 Flat Washer
- C. M6 Nylon Washer

2.3

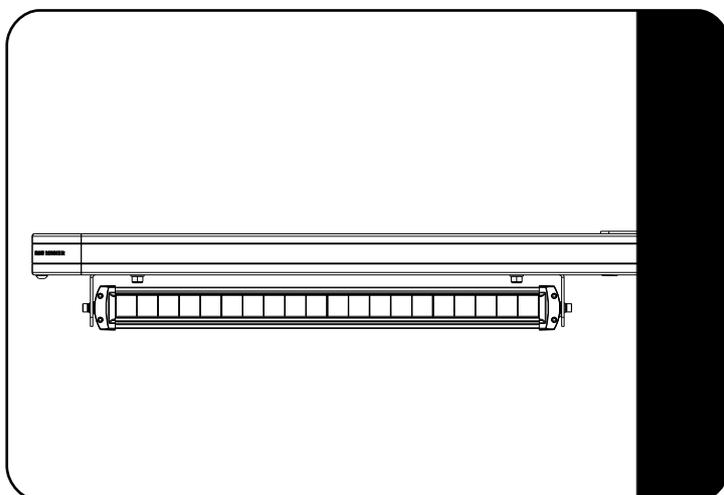


Fully tighten all the fasteners.

2

FIT AND SECURE - FRONT OF RACK FITMENT

3.1

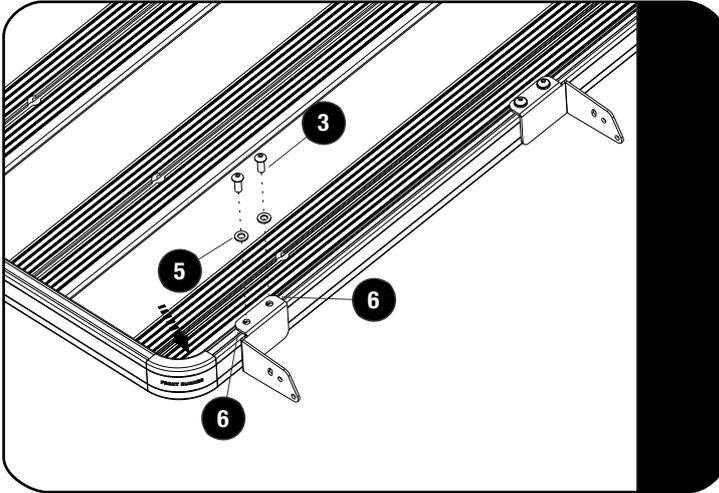


Choose where on the rack you would like to fit the LED light.

Slide four M8 Nyloc Nuts (Item 6) into the Side Profile.

Loosely fit the Mounting Brackets (Item 2LH & 2RH) using M8 x 20 Button Heads and M8 x 16 x 1.6SS Flat Washers (Items 3 & 5) as shown.


3.2

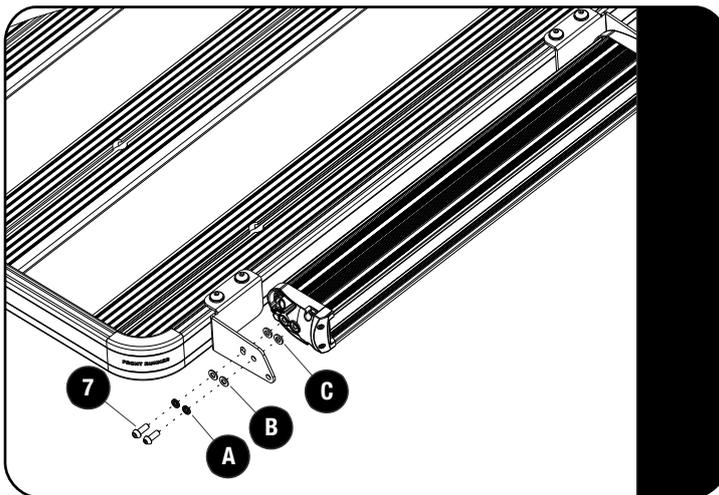

Fit the LED light to the brackets as shown, using the M6 x 16 Button Head Bolts (Item 7) and fasteners supplied with the light .

- A. M6 String Washer
- B. M6 Flat Washer
- C. M6 Nylon Washer

3.3

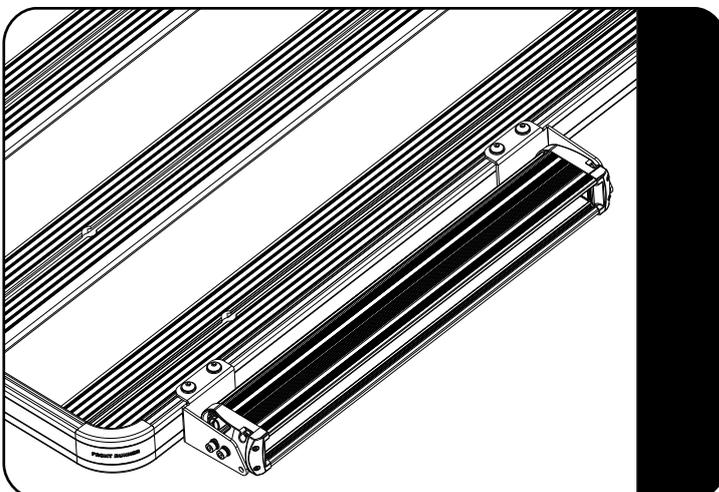

Fully tighten all the fasteners.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

