




FRONT RUNNER
VEHICLE OUTFITTERS

**UNIVERSAL DRAWER
SMALL SUV**

ENG

SSDR011

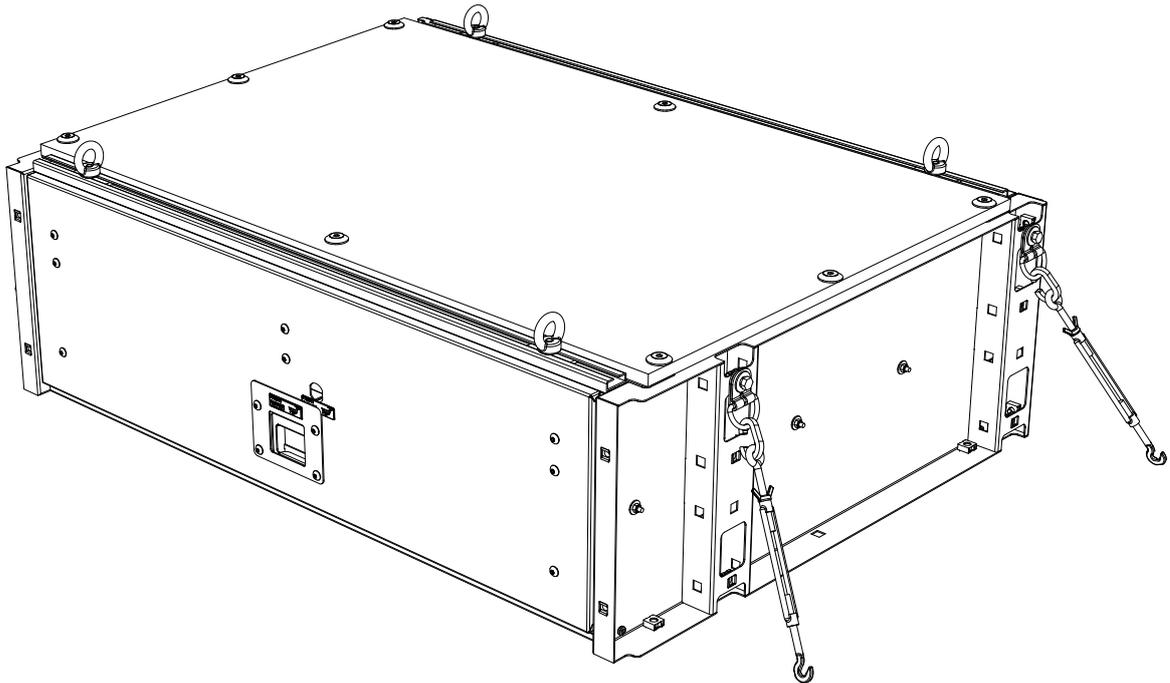

READ ME !

Thank you for purchasing Front Runner Universal Drawer Small SUV.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

Here is what you are looking at for SSDR011

IN THE BOX

| | | |
|----|-----|--------------------------------|
| 1 | 1 X | Universal Drawer Large Pick-up |
| | 2 X | Set Of Keys |
| 2 | 4 X | Eye Nut |
| 3 | 4 X | M8 Nylon Washer |
| 4 | 4 X | Stud Plate |
| 5 | 4 X | D-Ring |
| 6 | 4 X | M6x19x1ss Flat Washer |
| 7 | 4 X | M6 Spring Washer |
| 8 | 4 X | M6x20 Hex Bolt |
| 9 | 4 X | Carabiner Hook 60mm |
| 10 | 4 X | M6 Wing Nut |
| 11 | 4 X | Turnbuckle |
| 12 | 4 X | M6 x 30 Countersink Screw |
| 13 | 4 X | M6 Finishing Washer |

TOOLS NEEDED



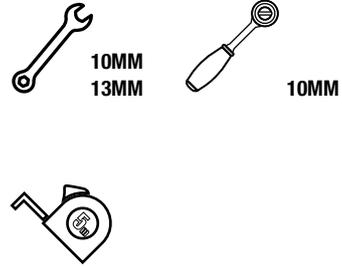


FIGURE 1.1

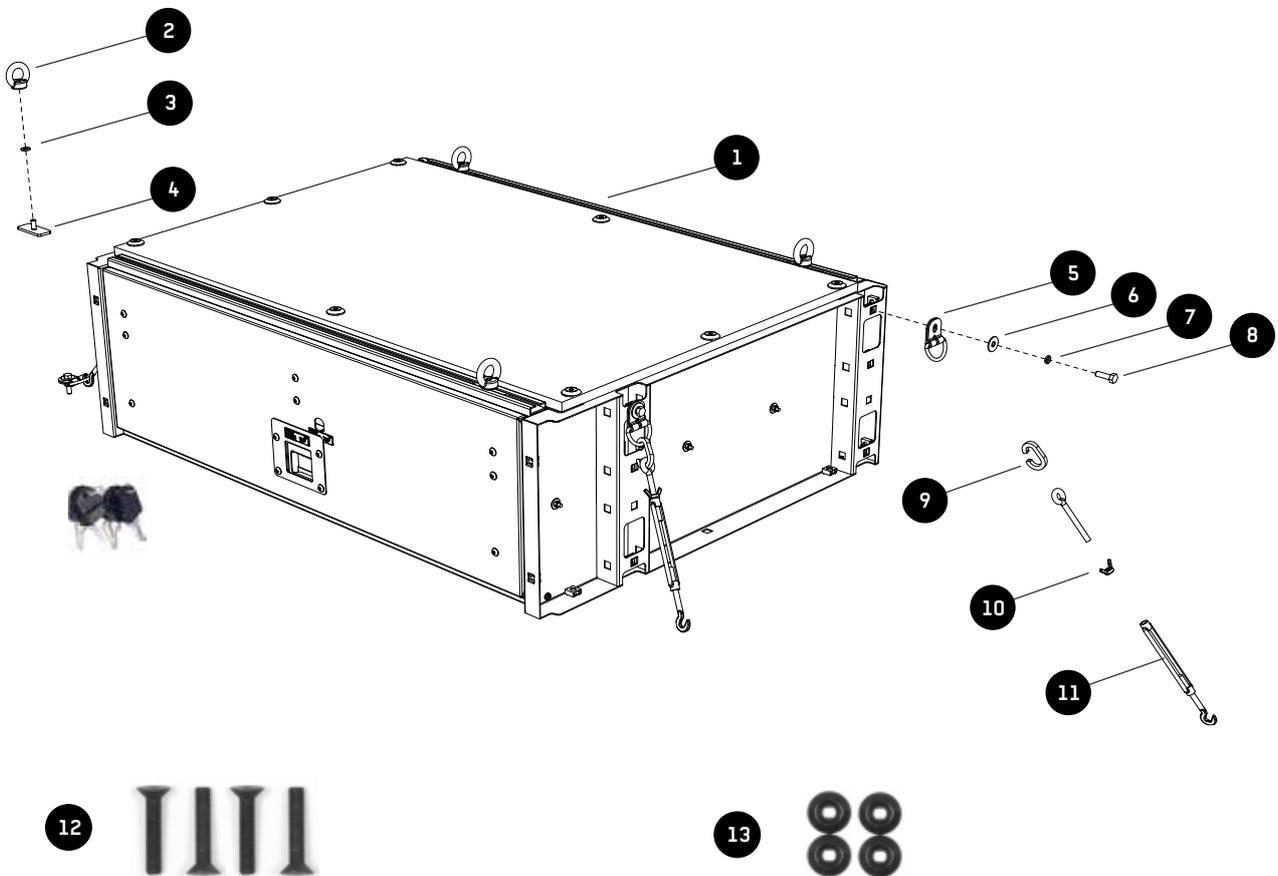


2**FIT AND SECURE**

2.1

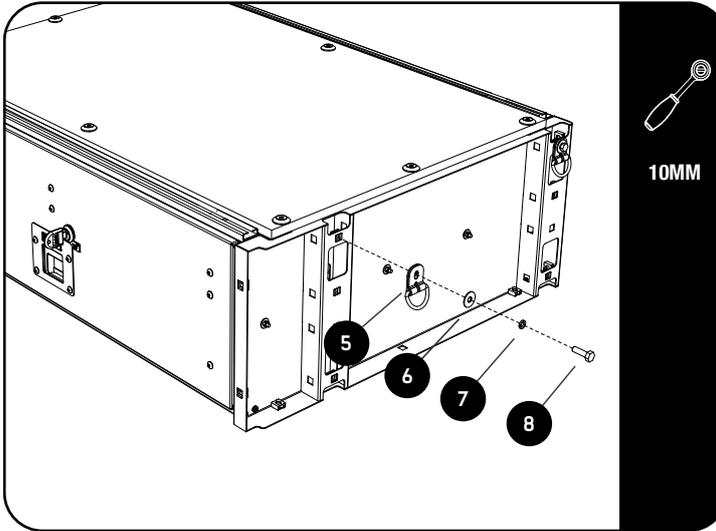


Secure the 4 D-Rings (item 5) on both sides of the drawer using the fasteners shown.

2.2

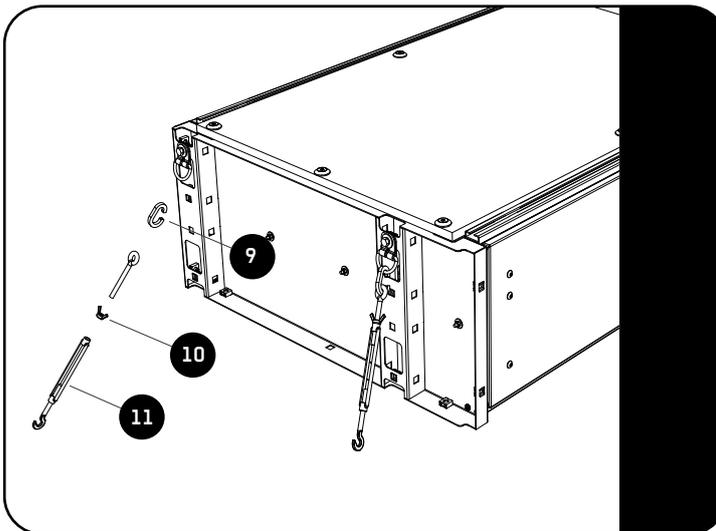

Assemble each of the 4 turnbuckles (item 12) with a wing nut (item 10) as shown. The wing nut will be used to lock the turnbuckles after they have been set.

2.3

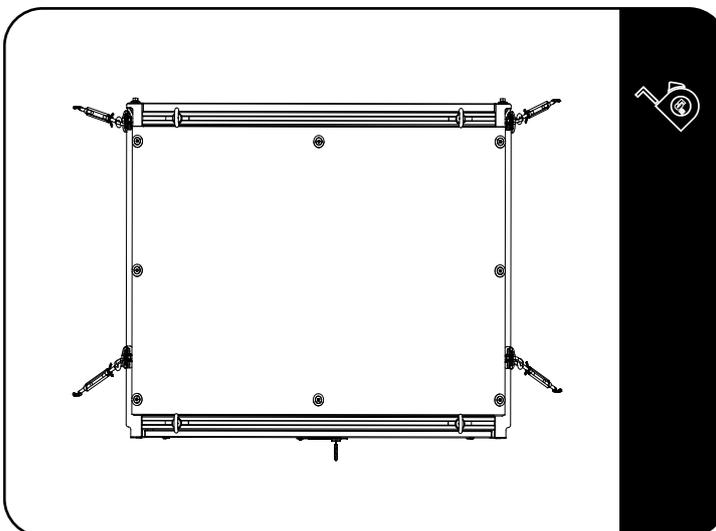


Place the drawer in the vehicle and position as desired. Making sure the turnbuckles are pulling outward to prevent the drawer from moving after it has been secured.

2

FIT AND SECURE

2.4

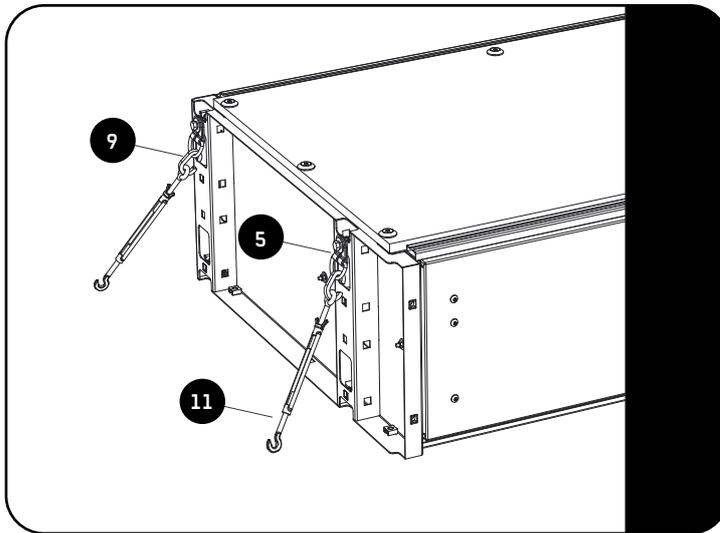


🔄 Connect the C-hooks (item 9) onto the D-rings (item 5) on the drawers upright. Connect the turnbuckles (item 11) on the other side of the C-hooks and hook it into the tie-down that are fitted to the vehicle.

Secure the drawer by tensioning the turnbuckles until there is no more movement on the drawer. Make sure the drawer stays in position when doing this.

⚠️ Lock the turnbuckles with the wing nuts. Do this by tightening the wing nuts up to the turnbuckles. Refer to diagram 2.2

2.5

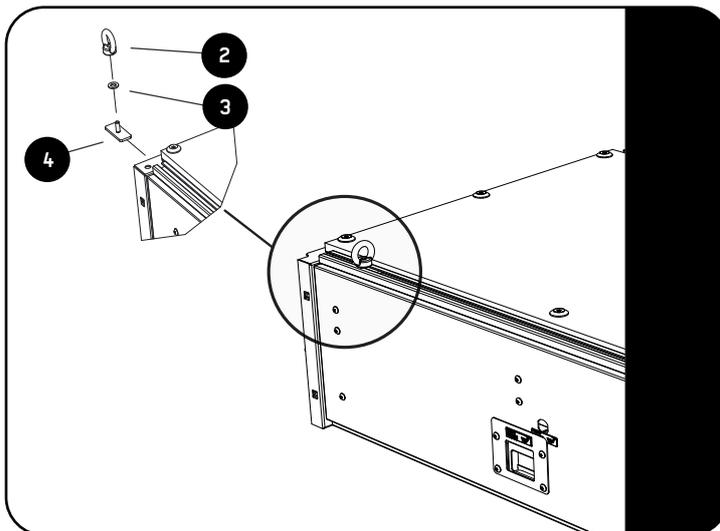

🔄 Assemble the eye-nuts (item 2) with a M6 nylon washer (item 3) and a stud plate (item 4) and slide them into place.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    