**READ ME FIRST !** ⚠

Thank you for purchasing a Front Runner Battery Device Mounting Plate.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

**IMPORTANT WARNING!** ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

**NOTE:** Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

# 1

## GET ORGANIZED

### IN THE BOX

1	2 X	M6 x 16 Counter Sink Screw
2	2 X	M6 x 19 x 1SS Flat Washer
3	2 X	M6 x 12 x 1 SS Flat Washer
4	2 X	M6 Nyloc Nut
5	4 X	M4 x 25 Button Head
6	8 X	M4 Flat Washer
7	1 X	Battery Mounting Plate
8	4 X	M4 Nyloc Nut

### TOOLS NEEDED


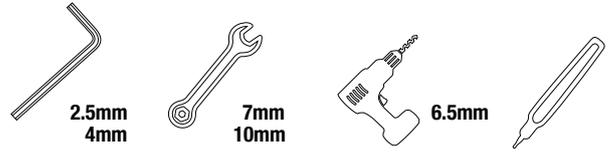



FIGURE 1.1

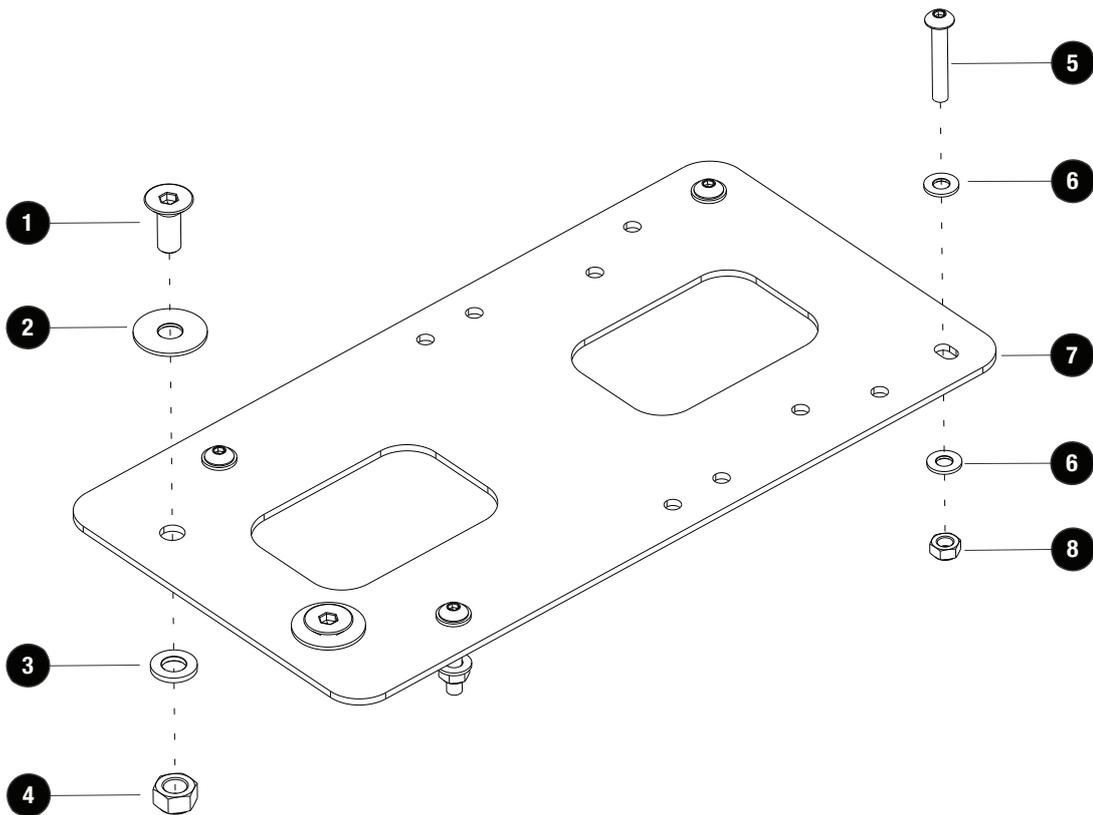

2

FIT AND SECURE


2.1

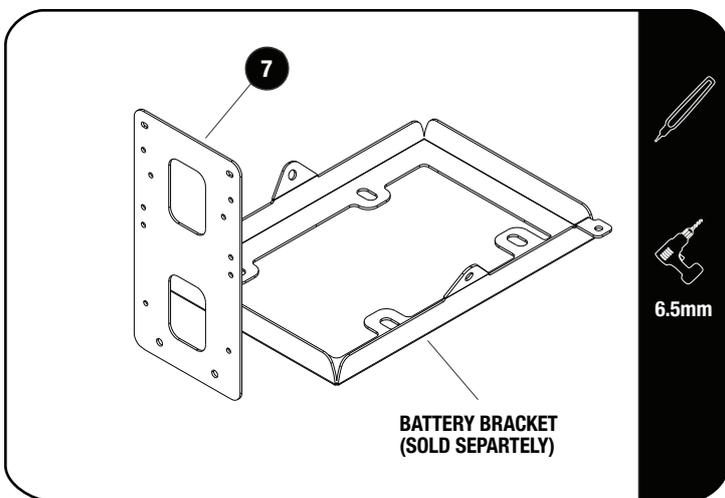

☺ Determine where on the Battery Bracket you would like to mount the Battery Device Mounting Plate (Item 7). Using a marker pen, mark the two holes.


Using a 6.5mm drill bit and drill, drill on your marked location.

2.2

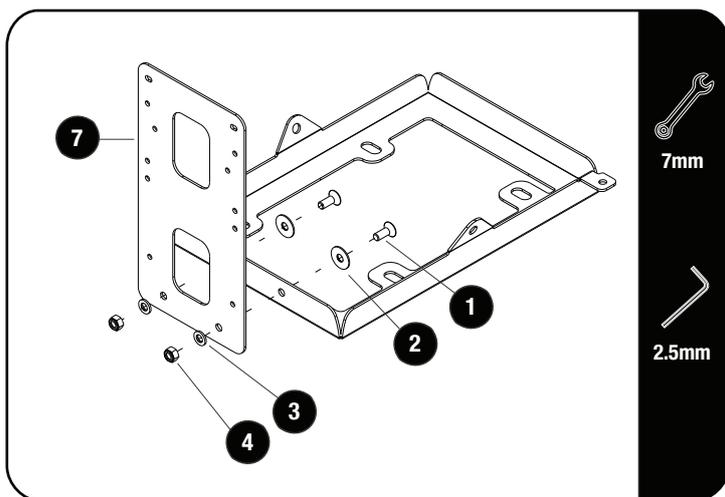

☺ Using two M6 x16 Countersink Screws, two M6 x 19 x 1SS Flat Washers, two M6 x 12 x 1SS Flat Washers and two M6 Nyloc Nuts (Items 1, 2, 3 & 4) fasten the Battery Device Mounting Plate (Item 7) to the Battery Bracket.

2.3

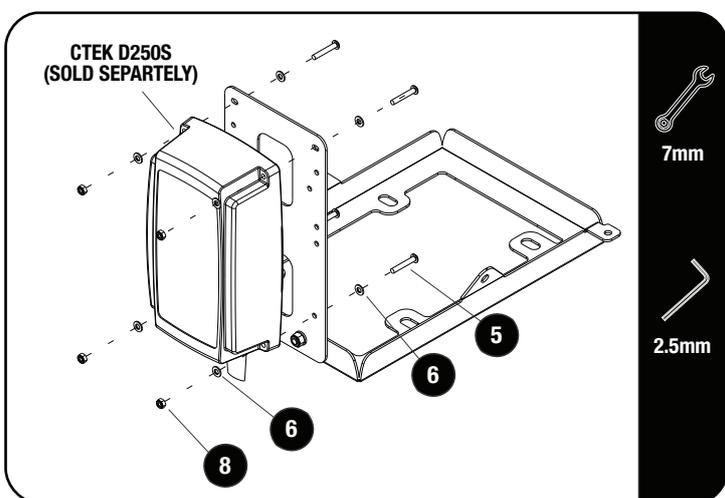


☺ **CTEK (D250S DUAL) INSTALLATION**

Using four M4 x 25 Button Head, eight M4 Flat Washers and four M4 Nyloc Nuts (Items 5, 6 & 8), fasten the CTEK to the Battery Device Mounting Plate (Item 7).

2

**FIT AND SECURE**


2.4

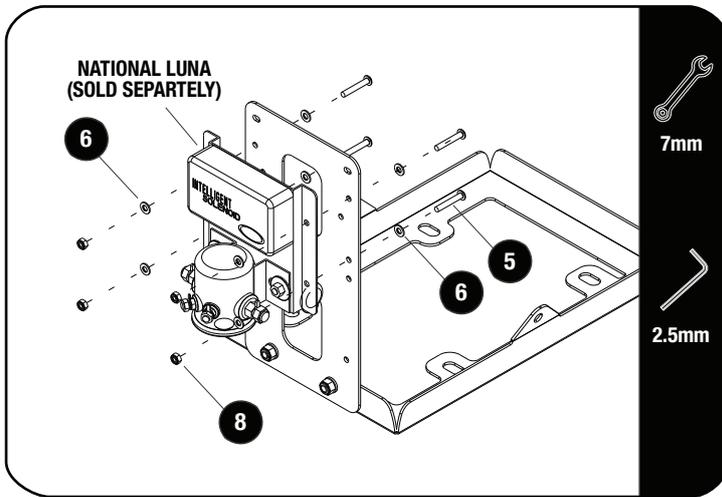

**NATIONAL LUNA INTELLIGENT SOLENOID SPLIT CHARGER INSTALLATION.**

Using four M4 x 25 Button Head, eight M4 Flat Washers and four M4 Nyloc Nuts (Items 5, 6 & 8), fasten the National Luna Intelligent solenoid split charger to the Battery Device Mounting Plate (Item 7).

2.5

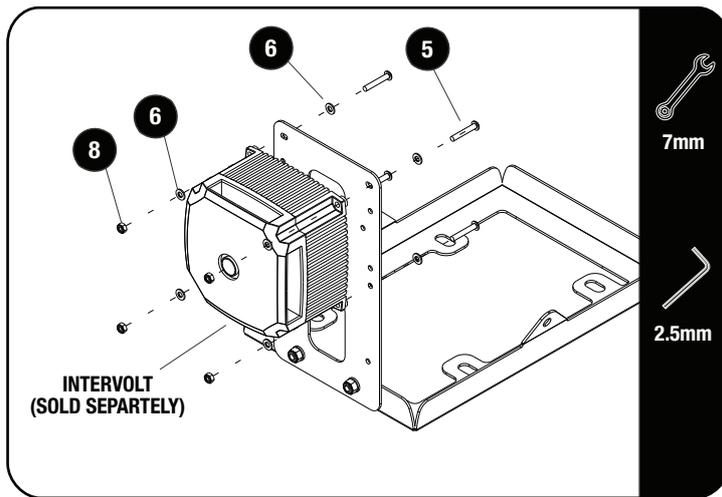

**InterVOLT (DCC1225ACD) INSTALLATION**

Using four M4 x 25 Button Head, eight M4 Flat Washers and four M4 Nyloc Nuts (Items 5, 6 & 8), fasten the Intervolt to the Battery Device Mounting Plate (Item 7).

3

**FINISH**

Congratulations! You did it. Take a step back and admire your work!

4

**INSTALL OTHER VEHICLE AND RACK ACCESSORIES**

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

