




**FRONT RUNNER**  
VEHICLE OUTFITTERS

**DRAWER DECK COMPLETION SET**  
**LAND ROVER NEW DISCOVERY**

ENG

SSDS903

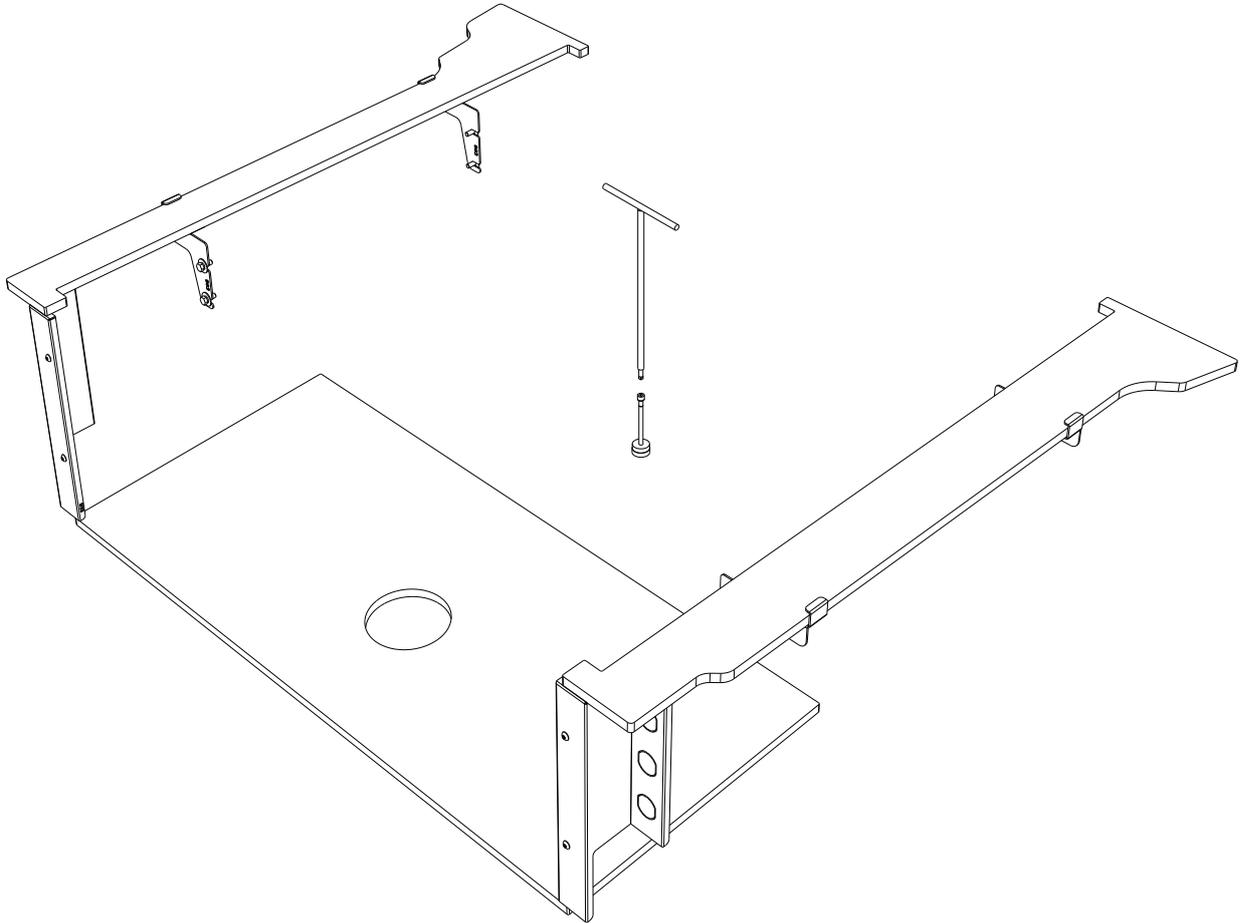

**READ ME !** ⚠

Thank you for purchasing a Front Runner Drawer Deck Completion Set.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

**IMPORTANT WARNING!** ⚠

FRONT RUNNER CAN NOT RECOMMEND A MAXIMUM LOAD CARRYING CAPACITY. PLEASE REFER TO YOUR VEHICLE MANUFACTURER'S RECOMMENDATIONS. IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

# 1

## GET ORGANIZED


### IN THE BOX

1	1 X	Side Deck LH
2	1 X	Side Deck RH
3	1 X	Replacement Floor
4	1 X	Short Side Wing RH
5	1 X	Short Side Wing LH
6	1 X	Long Side Wing RH
7	1 X	Long Side Wing LH
8	2 X	Front Face 1LH + 1RH
9	4 X	M5 x 10 Button Head
10	4 X	M5 x 10 x 1SS Flat Washer
11	4 X	M5 Nyloc Nut
12	8 X	M6 x 19 x 1SS Flat Washer
13	8 X	M6 SS Spring Washer
14	8 X	M6 x 16 Hex Bolt
15	6 X	Laser Cut Carabiner 115mm
16	2 X	Laser Cut Carabiner 37mm
17	1 X	Wheel Winder Rectangular Adaptor
18	1 X	Wheel Winder

### TOOLS NEEDED



FIGURE 1.1

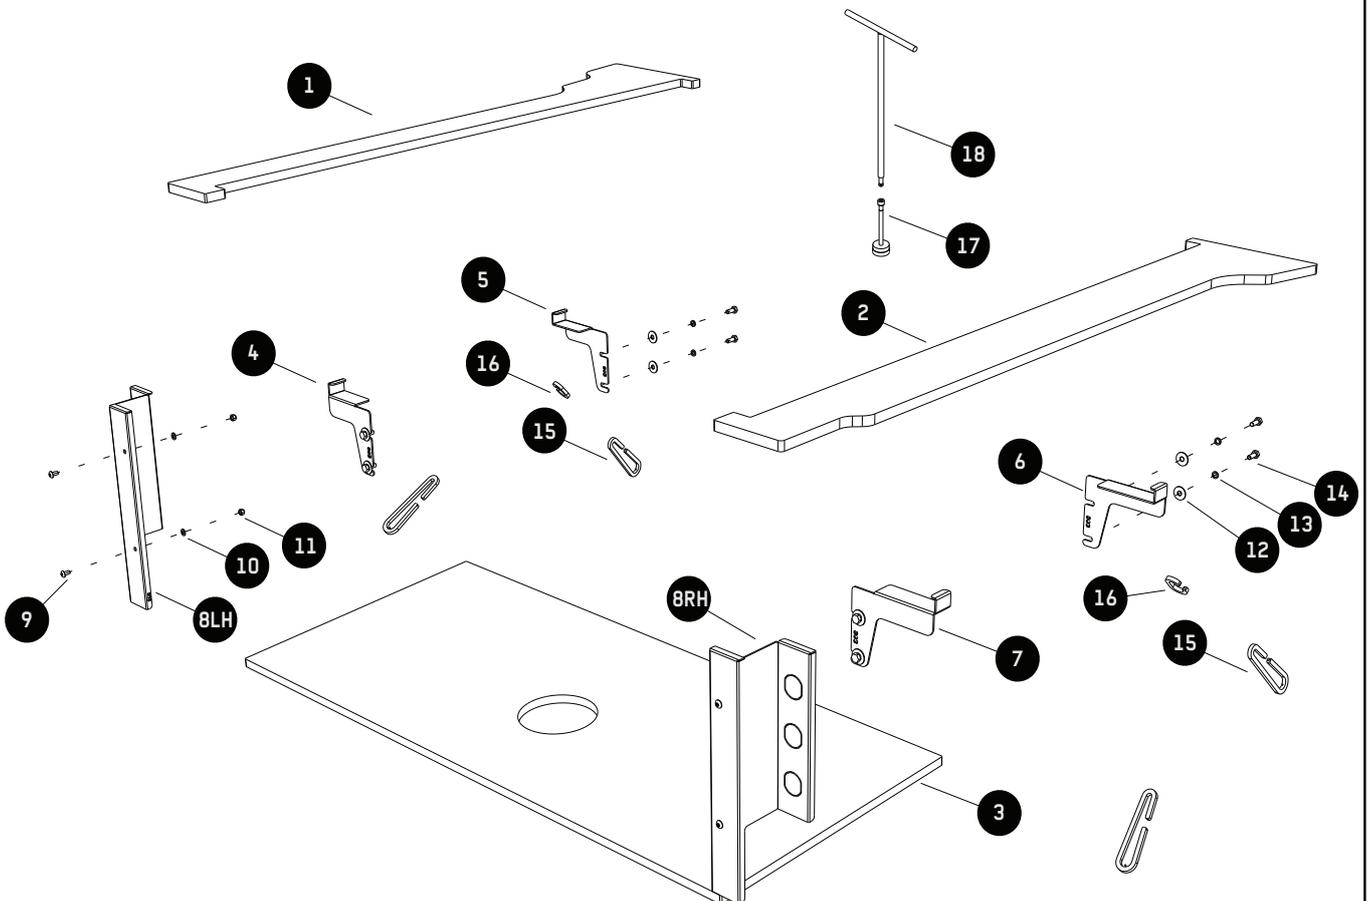

**2****FIT AND SECURE**

2.1



 Looking just inside the rear door, loosen the left and right tie-down ring. Cut the plastic locating strip (A) off with a Side Cutter.

2.2




 Refit the tie-down rings facing outward as shown.

 Remove the existing rear floor panel of the vehicle and replace it with the Replacement Floor (Item 3) supplied.

Remember to remove the rubber plug covering wheel winder and keep in a safe place.

2.3

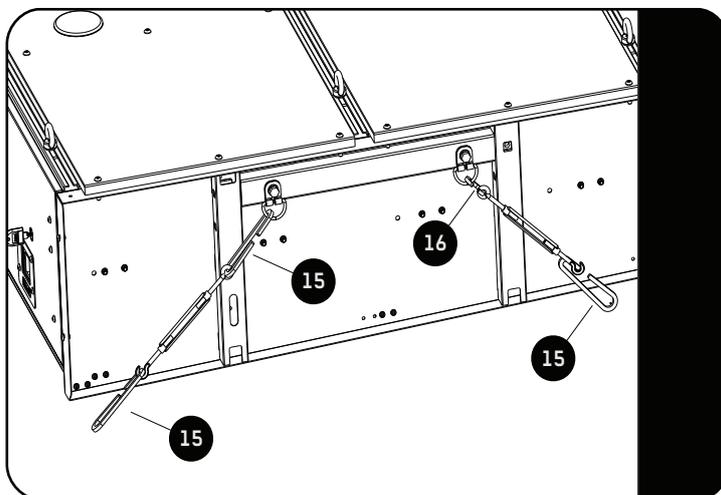

 Place the Drawer in the vehicle. Using the Side Decks, position the drawer in the vehicle. See Step 2.6.

Secure the front of the Drawer using a Turnbuckle supplied with the Drawer (SSDR002) and two 115mm Laser Cut Carabiners (Item 15).

Secure the rear of the Drawer using a Turnbuckle and one 37mm Laser Cut Carabiner (Item 16) hooked on the Drawers D-Rings and one 115mm Laser Cut Carabiner hooked on the tie-down point in the vehicle.


Before fully tightening the Turnbuckles, check that the Drawer is still in position by using the Side Decks as reference.

Secure the wing nuts to prevent the Turnbuckles from coming loose.

2

**FIT AND SECURE**


2.4

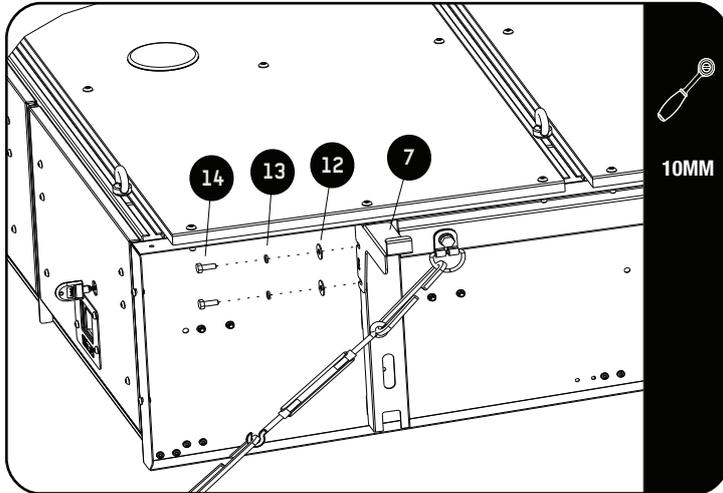

Secure the Side Wings (Items 4, 5, 6 & 7) using M6 x 16 Hex Bolt, M6 Spring Washers and M6 x 19 x 1SS Flat Washers (Item 12, 13 & 14) as shown.


⚠ The left hand Side Wing and right Hand Side Wing differ in length. See Figure 1.1 for the positioning.

2.5

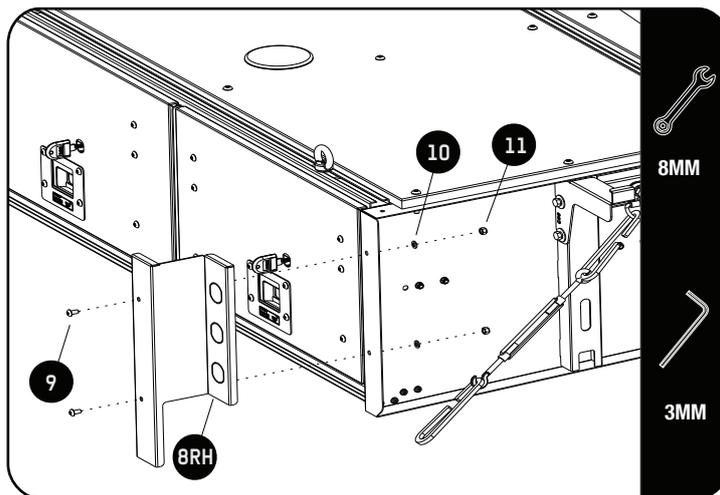

Secure the Front Face (Item 8) using M5 x 10 Button Heads , M5 x 10 x 1SS Flat Washers and M5 Nyloc Nuts (Items 9, 10 & 11)

2.6

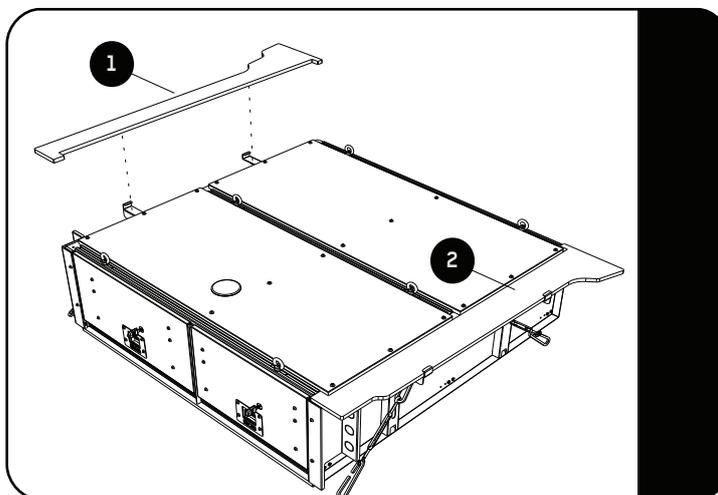


Place the Side Decks (Item 1 & 2) onto the Drawer making sure that you slide it into the C-clip of the Front and Rear Side Wings.

2

## FIT AND SECURE

2.7

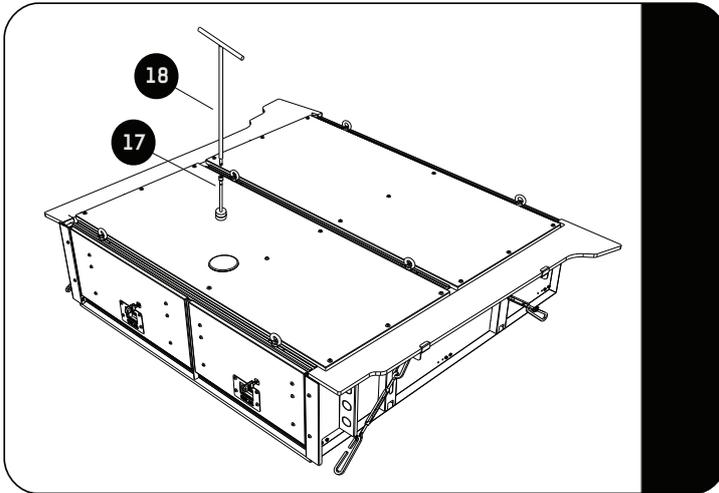

### LOWERING THE SPARE WHEEL


Remove the Plastic Cap and open the drawers. Insert the Wheel Winder + Adaptor (Item 17 and 18) into the hole.

Locate the vehicles wheel winder and turn to lower the wheel.

3

## FIT ECOM SOCKETS

3.1

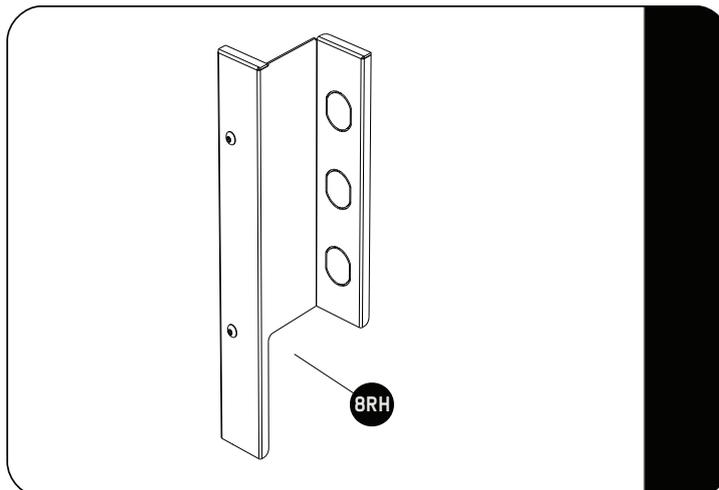

Twist the pre cut knock outs to remove. These cut outs can then be used to fit ECOM sockets (Sold Separately)

ECOM117 - Amp  
ECOM118 - USB  
ECOM119 - 12/24V  
ECOM120 - Merit  
ECOM121 - Engel  
ECOM124 - Volt

4

## COMPLETION

4.1



**Congratulations! You did it. Take a step back and admire your work!**

5

**Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions. Please call us if you have any questions about the installation of this product.**

6

## INSTALL OTHER VEHICLE AND RACK ACCESSORIES

**Now's the time to visit your favorite Front Runner Dealer in person or Online.**

**Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam**

**Share your adventures on:**    