



FRONT RUNNER


**DRAWER BRACKETS LARGE FOR
SUV DECK COMPLETION SET**

ENG

SSWS003



INSTALL TIME: 15 mins

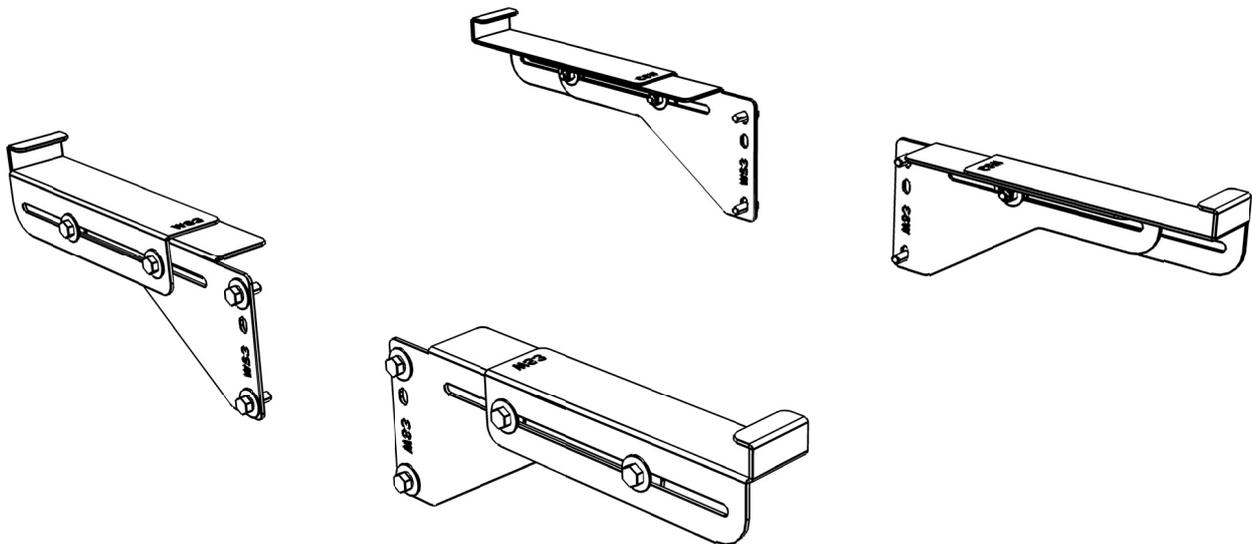

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1 DECK COMPLETION SET ASSEMBLY

(A) Assemble the Side Wing and the Wing Slide (Items 3, 4) as shown below using two M6 x 16 Hex Bolts, two M6 flat Washers, two M6 x 19 Flat Washers and two M6 Nyloc Nuts as shown (Items 1, 2, 5, 6)

Item #	Quantity	Description
1	16	M6 NYLOC NUT
2	20	M6 x 19 FLAT WASHER
3	4	SIDE WING - 2 LEFT, 2 RIGHT
4	4	WING SLIDER - 2 LEFT, 2 RIGHT
5	20	M6 x 16 HEX BOLT
6	8	M6 SPRING WASHER

You will need:

2x 10 mm Flat or Socket Wrench

