

**READ ME !** ⚠

Thank you for purchasing a Front Runner Suzuki Jimny Rear Window Molle Panel.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

**IMPORTANT WARNING!** ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

**NOTE:** Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.



# 1 GET ORGANIZED

## IN THE BOX

1	1 X	Molle Panel
2	6 X	M6 X 19 X 1 Flat Washer
3	3 X	M6 X 12 Button Head Bolt
4	1 X	Grab Handle Mounting Bracket
5	3 X	20mm Spacer
6	3 X	M6 Plastic Retaining Washer
7	3 X	M6 X 35 Button Head Bolt
8	1 X	Rubber Buffer
9	1 X	M4 X 12 Button Head Bolt
10	1 X	M4 Nylock Nut
11	1 X	M4 Plastic Nut Cap
12	1 X	Curtain Airbag Mounting Bracket
13	2 X	M6 X 16 Button Head Bolt
14	2 X	M6 Rivnut
15	2 X	Short Molle Panel Straps
16	2 X	Long Molle Panel Straps

## TOOLS NEEDED



### Note:


There are two different fitments specified in this fitment guide.

For Jimny's without a curtain airbag (All South African and South American 4 seater models as well as European commercial 2 seater models) please refer to section 2 on page 3.

For Jimny's with a curtain airbag (4 seater models in Australia and Europe) please refer to section 3 on page 4.

If you are unsure about whether or not your Jimny has a curtain airbag, please contact your local dealer.


FIGURE 1.1

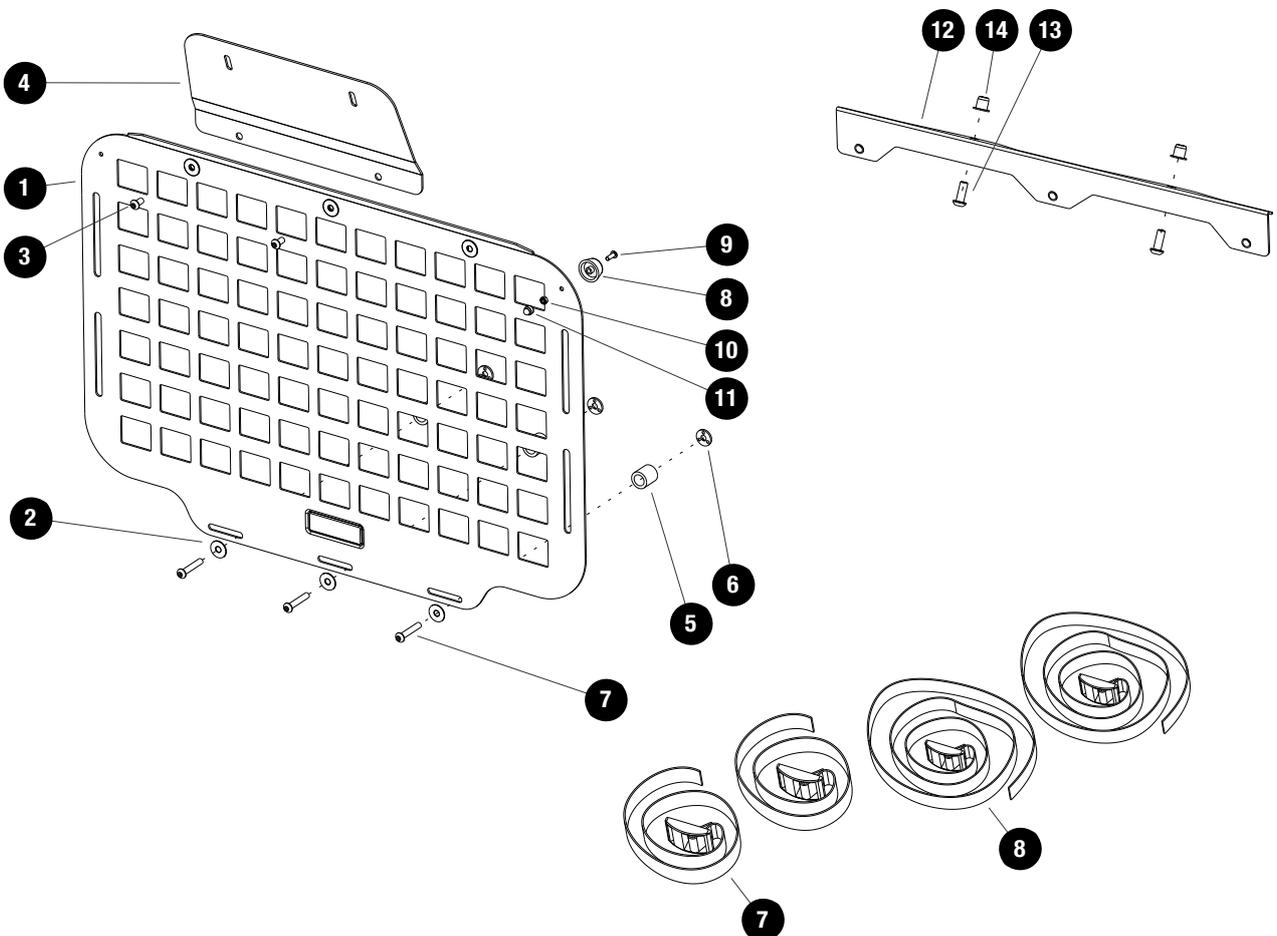

## 2

### FIT AND SECURE FOR JIMNY WITHOUT CURTAIN AIRBAG

2.1

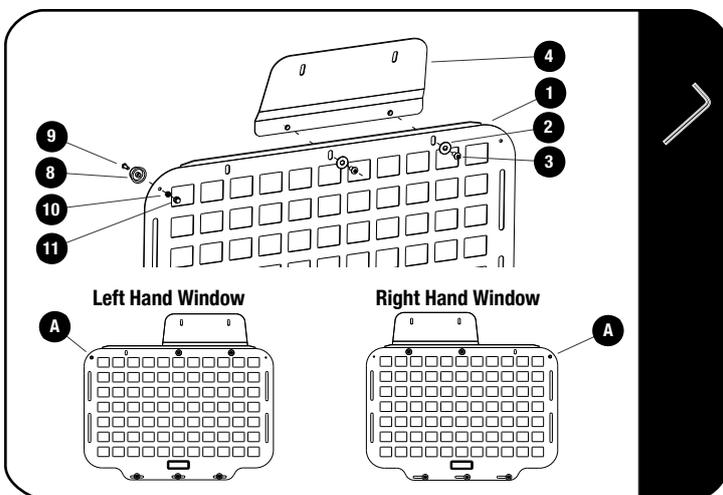


Fasten the Grab Handle Mounting Bracket (Item 4) to the Molle Panel (Item 1) using two M6 x 16mm Button Head Bolts (Item 3) and two M6 x 19 x 1 Flat Washers (Item 2) as shown in Figure 2.1.

Please note the Grab handle bracket orientation difference for the left -hand and right-hand window fitment in Fig 2.1.

Mount the Rubber Buffer (Item 8) using the M4 x 12mm Button Head Bolt (Item 9), M4 Nylock Nut (Item 10) and M4 Plastic Nut Cap (Item 11). The position of the rubber bumper is shown by Detail A in Fig 2.1.


2.2

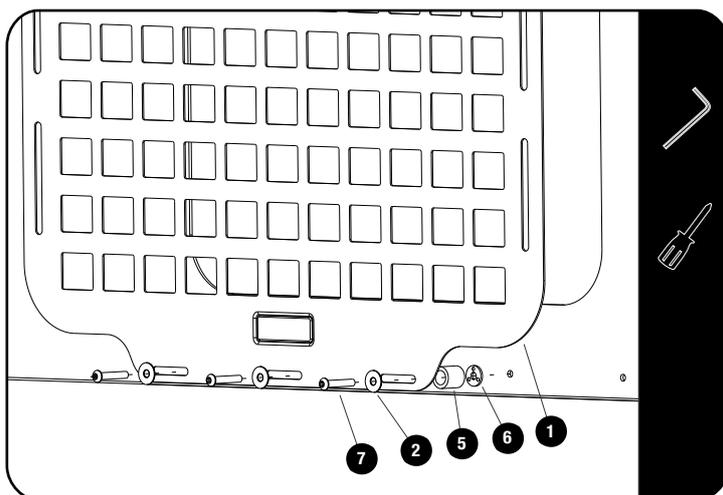

Remove the rear grab handles in the vehicle by removing the two mounting screws attaching the grab handle to the vehicle. There are five round plastic caps under the rear window, remove the three middle caps.

Loosley mount the bottom of the Molle Panel to the three mounting points under the rear window using M6 x 35mm Button Head Bolts (Item 7), M6 Flat Washers (Item 2), 20mm Spacers (Item 5) and M6 Plastic Retaining Washers (Item 6).

2.3

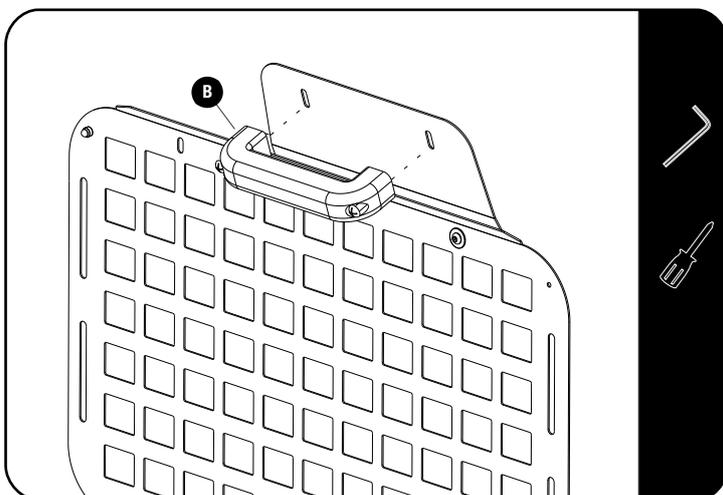

Align the Grab Handle Mounting Bracket slots with the grab handle mounting holes on the vehicle. Fasten the Grab Handle Mounting Bracket to the vehicle by re-fitting the grab handle (Item B) with the two mounting screws that were removed earlier, as seen in Fig 2.3.

Tighten the three M6 x 35mm Button Head Bolts (Item 7) at the bottom of the Molle Panel.




**Tightening Torque:**

**M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb**

**3**


**FIT AND SECURE FOR JIMNY WITH CURTAIN AIRBAG**

3.1

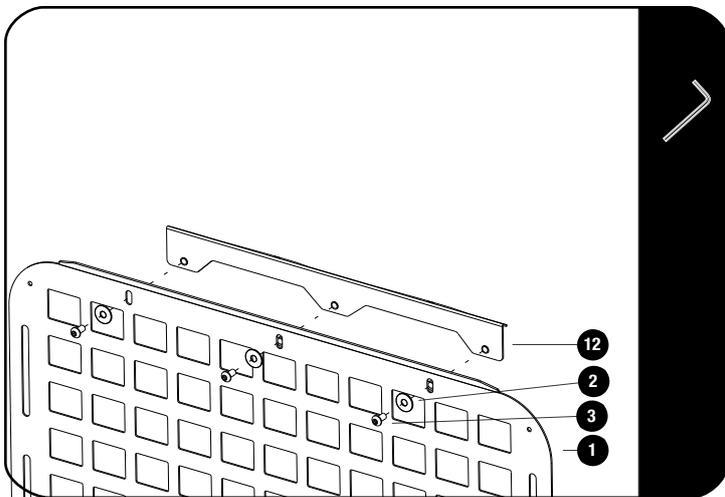


Loosley fasten the Curtain Airbag Mounting Bracket (Item 12) to the Molle Panel (Item 1) using three M6 x 16mm Button Head Bolts (Item 3) and Three M6 x 19 x 1 Flat Washers (Item 2) as shown in Figure 2.1.

3.2

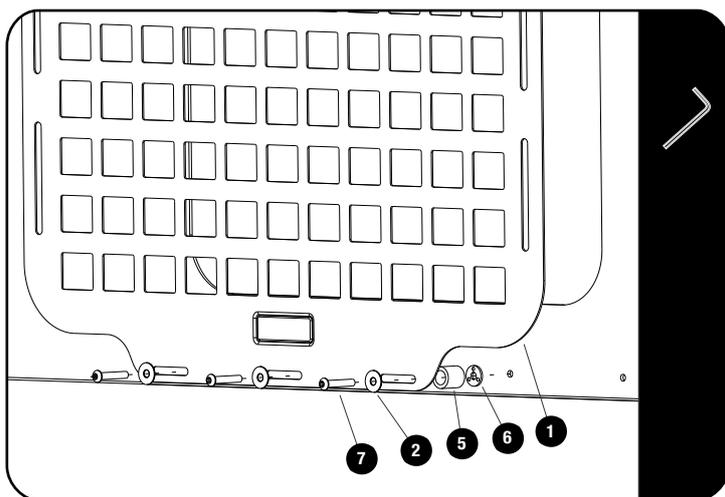

There are five round plastic caps under the rear window, remove the three middle caps. Loosley mount the bottom of the Molle Panel to the three mounting points under the rear window using M6 x 35mm Button Head Bolts (Item 7), M6 Flat Washers (Item 2), 20mm Spacers (Item 5) and M6 Plastic Retaining Washers (Item 6).


3.3

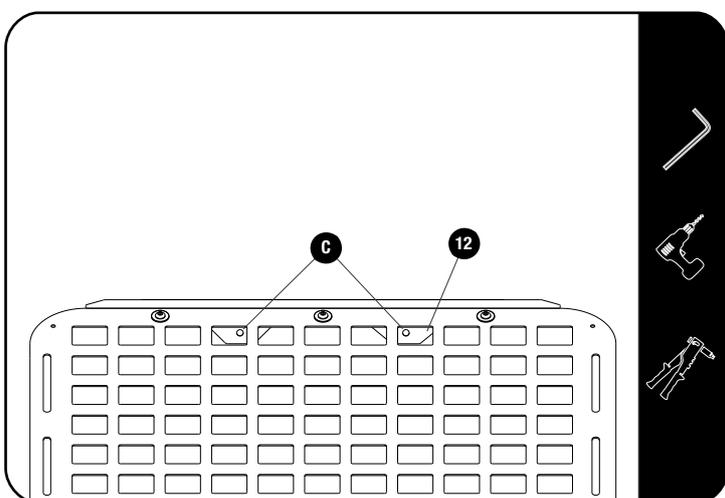

Push the Curtain Airbag Mounting Bracket (Item 12) upwards until it sits flush against the top window sill. Mark the location of the holes on the sill as seen in Detail C.

Remove the Molle Panel and drill 6mm pilot holes followed by 9mm holes in the sill on the markings. Insert two M6 Rivnuts (Item 14) into the holes using a Rivnut tool (Sold separately).

3.4

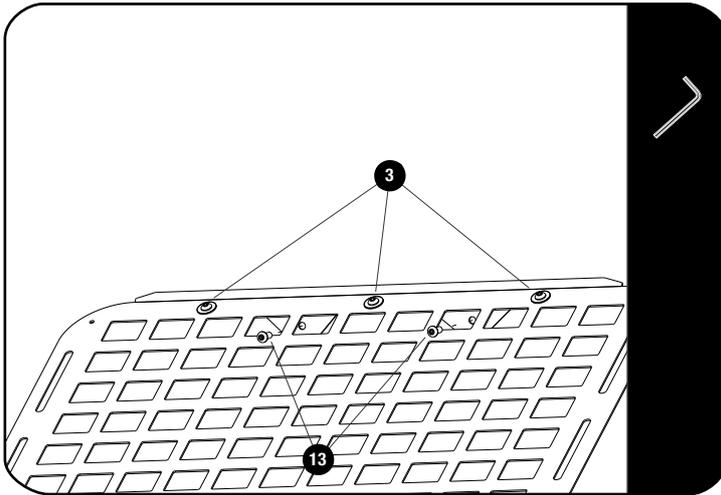

Recycle icon: Refit the Molle Panel at the bottom as per the instructions in Fig 3.2.

Fasten the Airbag Mounting Bracket to the Rivnuts you have inserted using the M6 x 16mm Button Head Bolts (Item 13).

Tighten the three M6 x 12mm Button Head Bolts (Item 3).



**Tightening Torque:**

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

4

## FINISH

Congratulations! You did it. Take a step back and admire your work!

5

## INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    