

# START HERE!

## READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

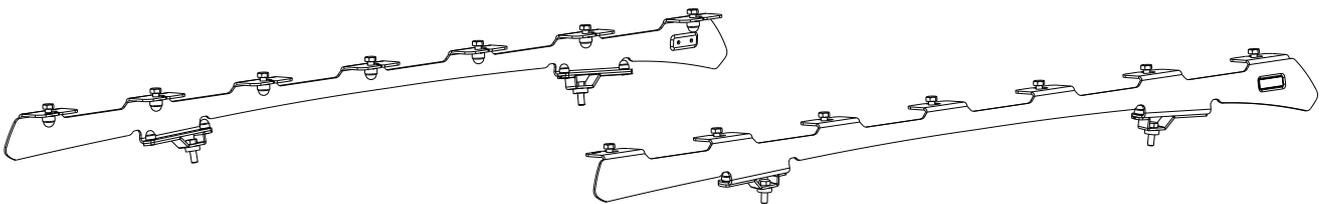

### IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

**NOTE:** Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.




# 1 GET ORGANIZED

## IN THE BOX

1	2 X	Foot Rails (1 LH & 1 RH)
2	2 X	Rear Saddle Bracket
3	2 X	Front Saddle Bracket
4	4 X	M8 x 25 Hex Bolt
5	4 X	Aluminium Spacer
6	8 X	M6 x 12 x 1 Flat Washer
7	8 X	M6 Nyloc Nut
8	8 X	M6 Nut Cap
9	14 X	M8 x 20 Hex Bolt
10	14 X	M8 x 16 x 1.6 Flat Washer
11	14 X	M8 Nut Cap
12	14 X	M8 Nyloc Nut


## TOOLS NEEDED

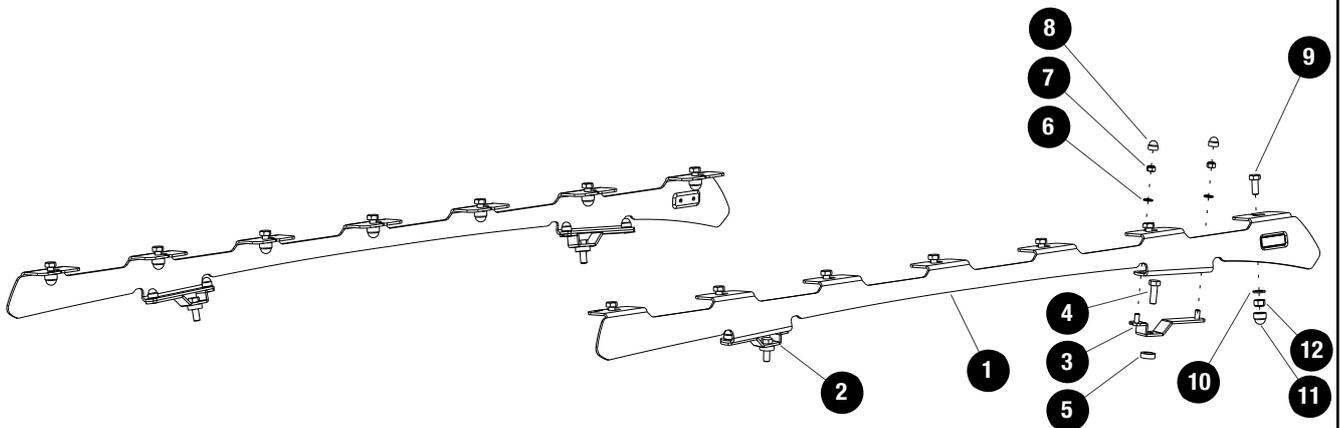

2


**FIT AND SECURE**

2.1

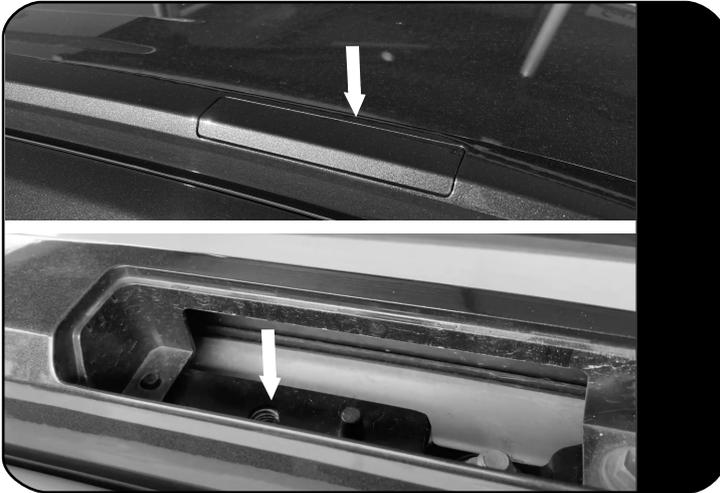

Start by removing the covers on the roof trim, using a trim removal tool. Do this for the front and rear, to reveal the OEM mounting points.

2.2

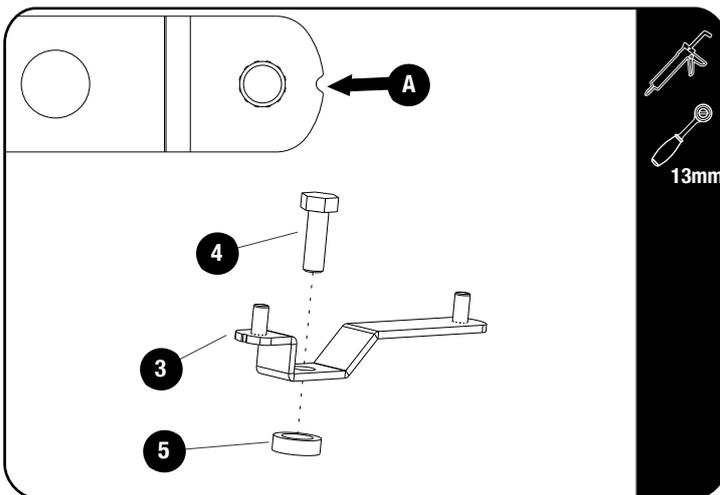

Starting at the front of the vehicle, place a Spacer (Item 5) over each Mounting Hole.

Align the Front Saddle Bracket - marked with a notch as shown (A) - in the cavity parallel to the roof trim.


Apply a bead of silicone to the thread of a M8 x 25 Hex Bolt (Item 4) and secure the Front Saddle Bracket (Item 3) to the OEM Mounting Hole.



**Tightening Torque:**

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

2.3

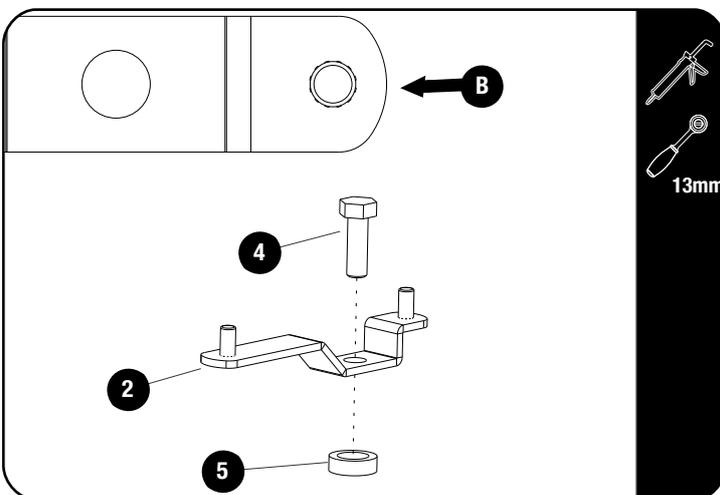

At the rear of the vehicle, place a Spacer (Item 5) over each Mounting Hole.

Align the Rear Saddle Bracket - not marked with a notch as shown (B) - in the cavity parallel to the roof trim.

Apply a bead of silicone to the thread of a M8 x 25 Hex Bolt (Item 4) and secure the Rear Saddle Bracket (Item 2) to the OEM Mounting Hole.




**Tightening Torque:**

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

## 2

### FIT AND SECURE

2.4

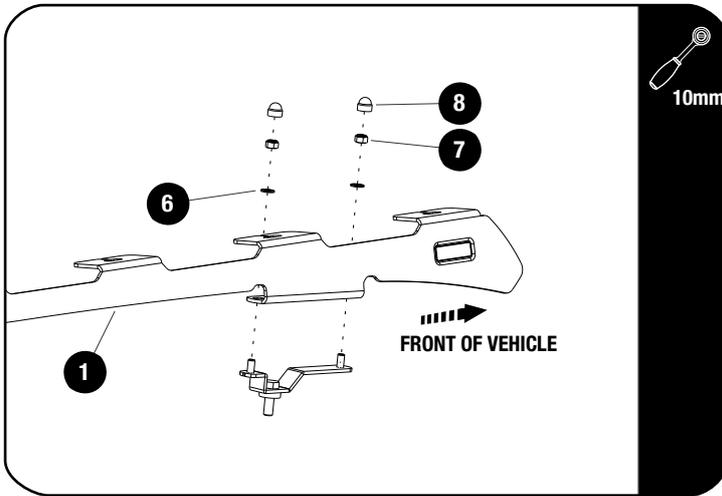

Place the Foot Rails (Item 1) over the corresponding studs on each Saddle Bracket as assembled in Steps 2.2 and 2.3.

Loosely assemble by using one M6 x 12 x 1 Flat Washer and one M6 Nyloc Nut (Items 6 & 7) on each stud.



#### Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

Tighten all fasteners and place M6 Nut Caps (Item 8) on all Nyloc Nuts.

## 3


### FIT AND SECURE

3.1

Refer to RRSUNI when assembling your Slimline II Tray.




3.2

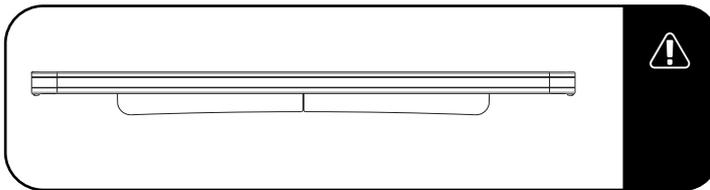

Make sure that the wind deflector is installed before you proceed to the next step.

3.3

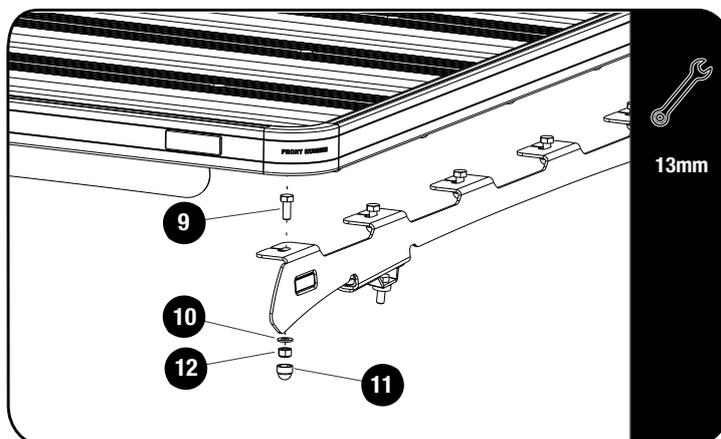

Fit your Tray to the Foot Rails using M8 x 20 Hex Bolts, M8 x 16 x 1.6 Flat Washers and M8 Nyloc Nuts (Items 9, 10 & 12) as shown.



#### Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.5 ft lb

3

### FIT AND SECURE

3.4

Center the rack and tighten fully. Use M8 Nut Caps (Items 11) to finish off the nuts.



4

### COMPLETION

4.1

Congratulations! You did it. Take a step back and admire your work!



5

### INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

### IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    